Installation Instructions

MIRR.EDGE

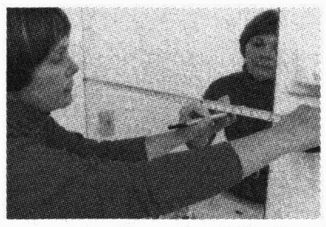

1. Measure mirror height & width.

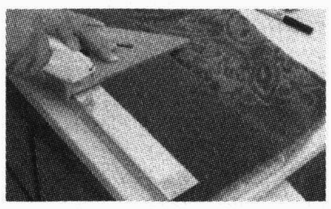

2. Score a line in strip to the measured length. Vertical Strips full height. Horizontal Strips deduct 3 1/2".

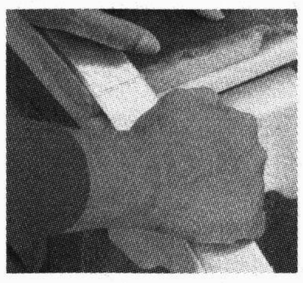

3. Hold strip firmly with both hands near line, crisply bend hands down to snap strip.

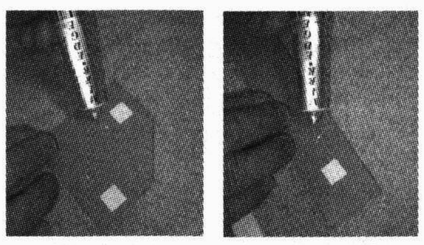

4. Affix adhesive pads and apply small dabs of glue to back of strips approx. 8"-10" apart. Repeat with Corner & Cover Seam Plates if used.

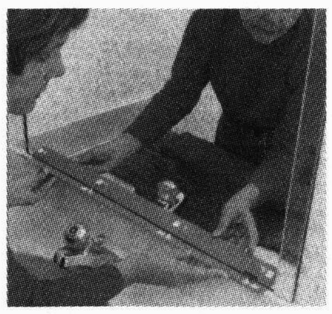

5. Place the vertical strips first, then the horizontal strips around perimeter of mirror.

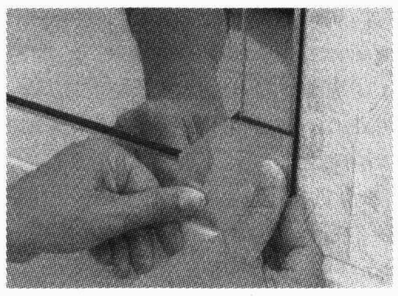

6. Peel back protective covering from acrylic mirror strips. Complete corner areas by affixing corner plates on top of strips in each corner.

- Cover Seam Plates are used to hide seams when using multiple strips for mirrors exceeding 60" in length.

- Only use Liquid Nails Adhesive™ LN 600 or Mirr.Edge® Adhesive.

DO NOT USE CLEANERS CONTAINING AMMONIA

For more information, visit
www.mirredge.com

Manufactured by
Millennium International
Development Corporation
Boca Raton, Florida USA

Instrucciones de Instalacion

MIRR.EDGE

1. Mida el espejo.

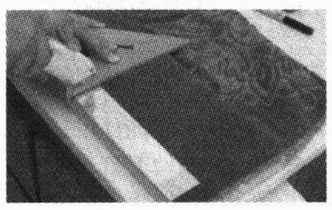

2. Marque una línea en la longitud que midió en la tira. Las tiras verticales a la altura total. Las tiras horizontales descontando 3 1/2 pulgadas.

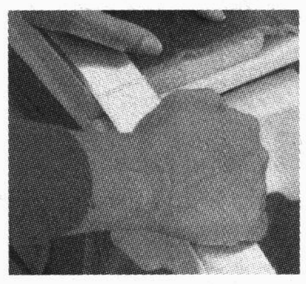

3. Sostenga la tira firmemente con ambas manos cerca de la linea marcada y súbitamente dóblela con las manos para que se partan las partes.

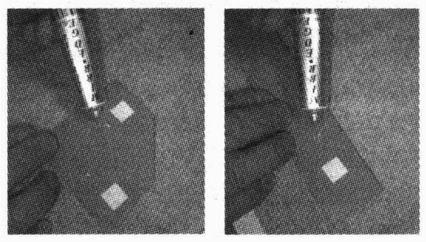

4. Cuadrados de cinta doble cara y pequenos toques de adhesivo separados aprox. 8"-10".

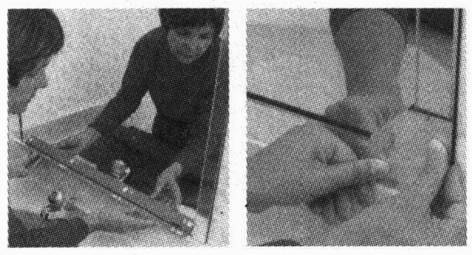

5. Fíjelas en su lugar.

- Las placas para cubrir se usan para ocultar las uniones cuando se utilizan múltiples tiras para espejos de mas de 60" (150 cm) de largo.

- Solamente use Liquid Nails™ LN 600 o el pegamento Mirr.Edge®.

NO USE LIMPIADORES QUE CONTENGAN AMONIACO

Por más informacion:
www.mirredge.com

MIRR.EDGE

Manufactured by
Millennium International
Development Corporation
Boca Raton, Florida USA